

NCS NATIONAL
CEILING
SYSTEMS

INSTALLATION GUIDE

GT Trident Exposed Grid System





CONTENTS

01 Tools Required

02 Ceiling Layout










03 Perimeter Trim Installation

04 Substrate Fixings & Hangers








05 Main Tee Installation

06 Cross Tee Installation

07 Tile Installation - Full Size & Cut

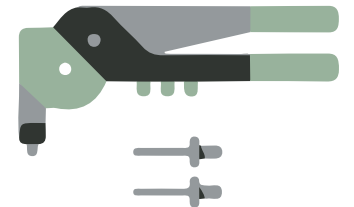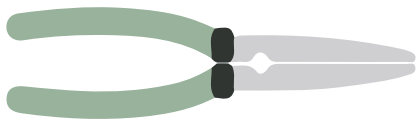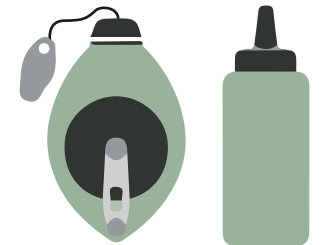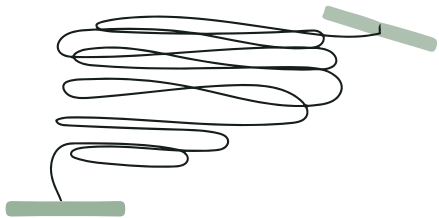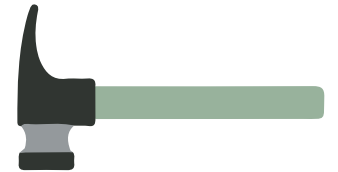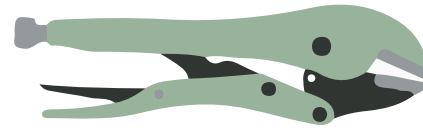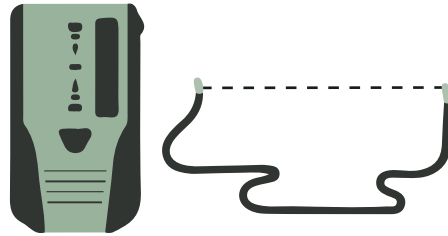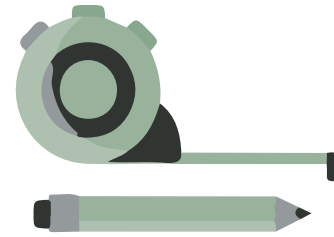
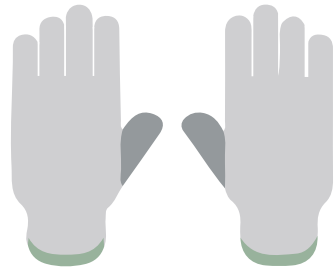


01 GENERAL TOOLS

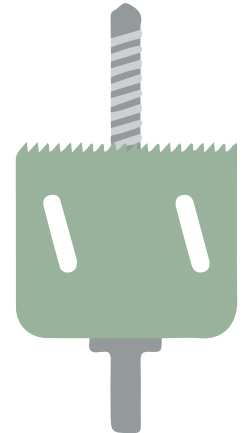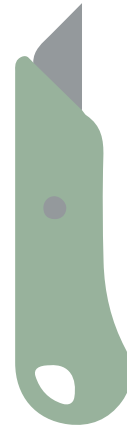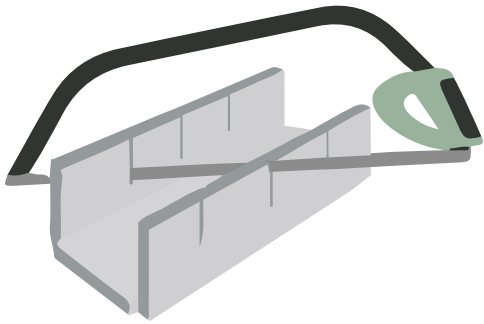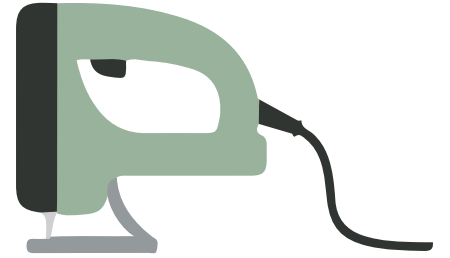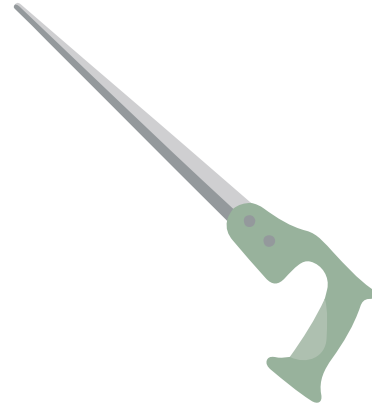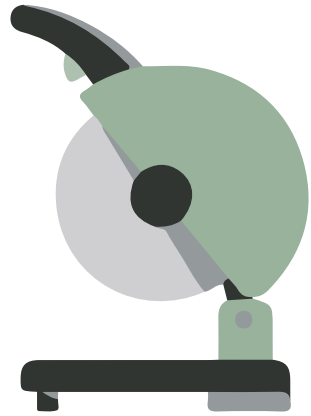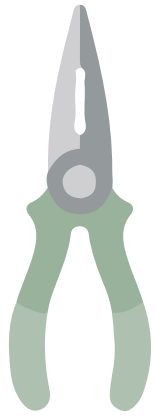


01.1 GRID





01.2 TILE

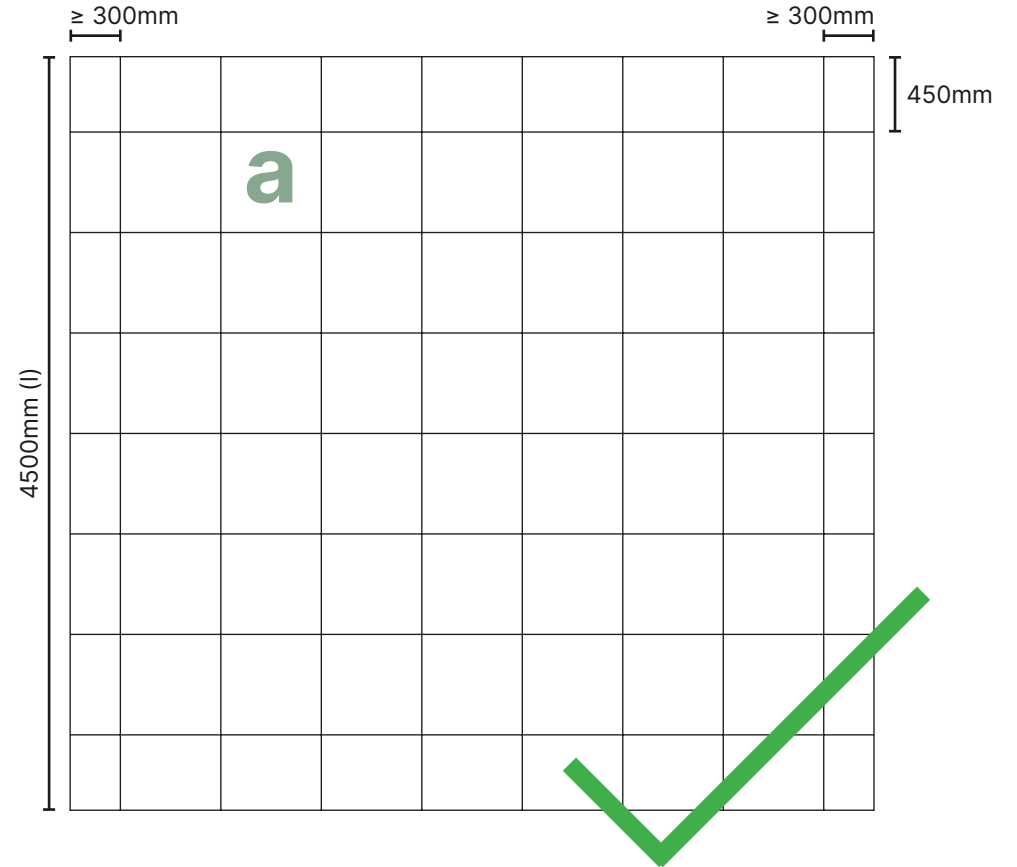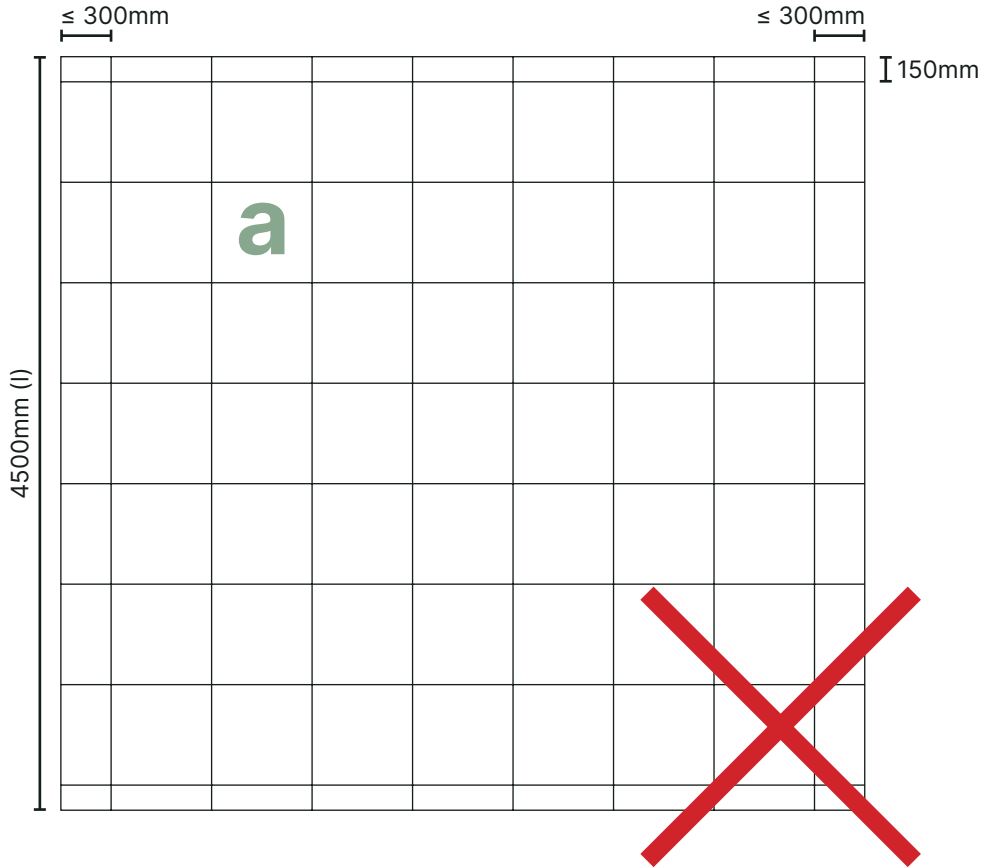





02 CEILING LAYOUT

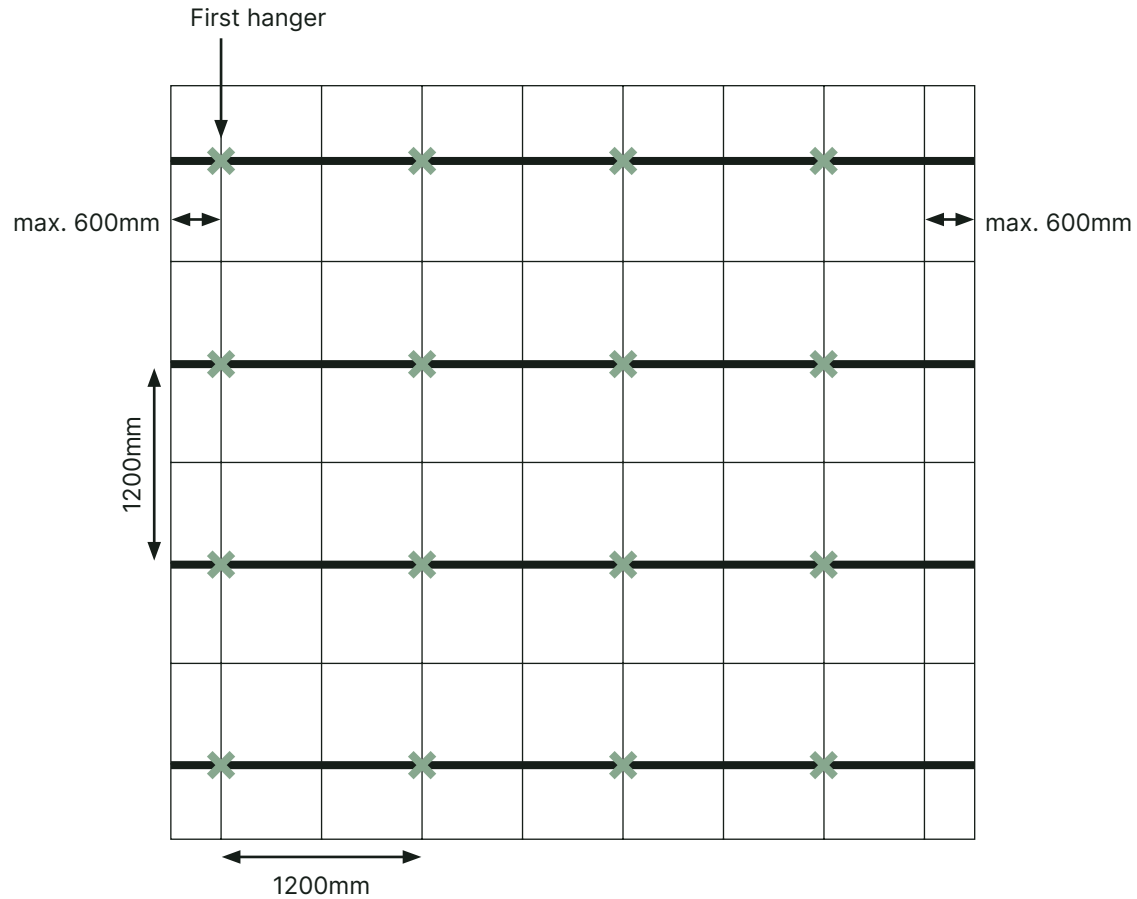


02.1 MAIN TEE DIRECTION

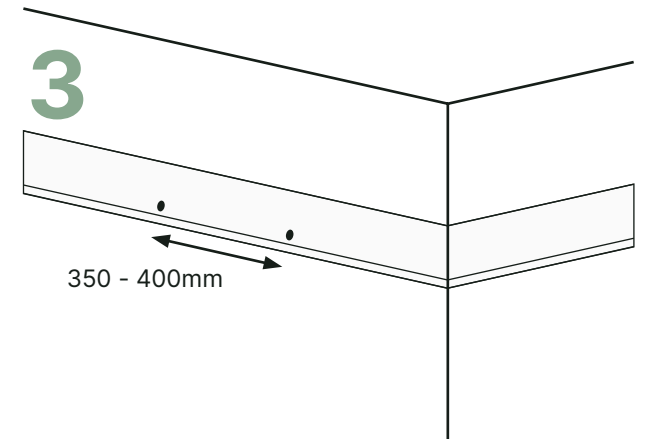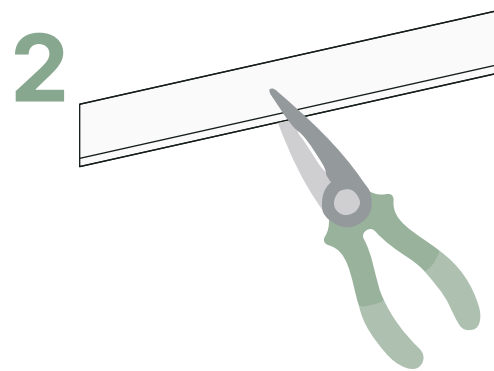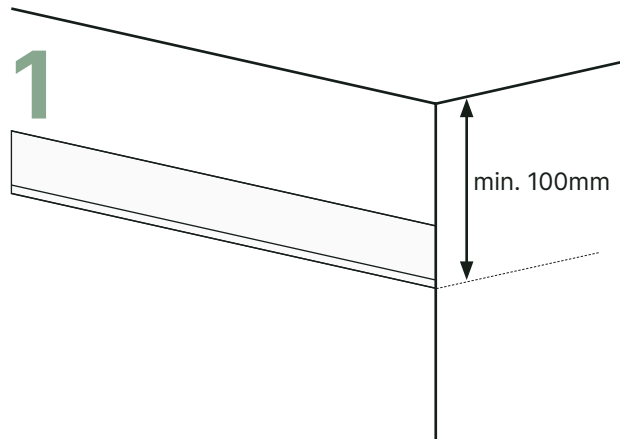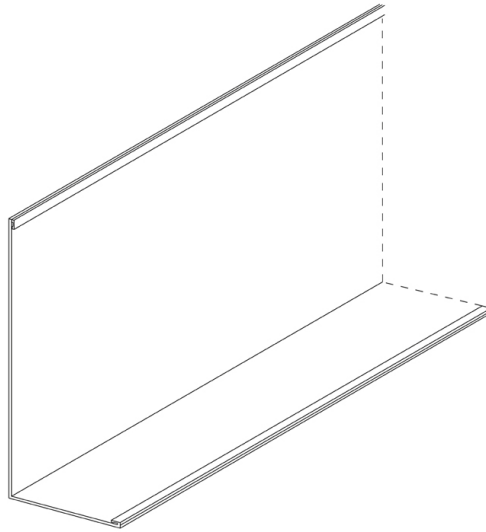


03 PLAIN WALL ANGLE

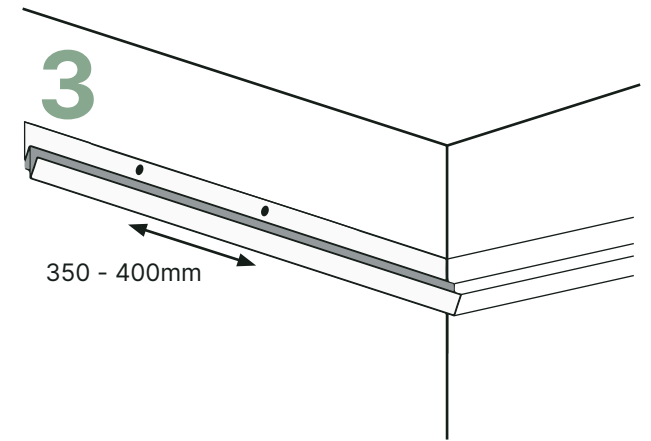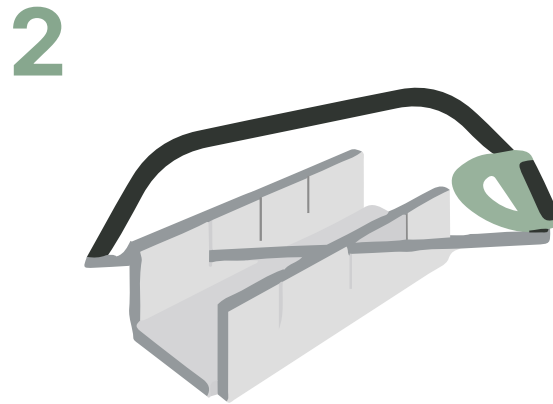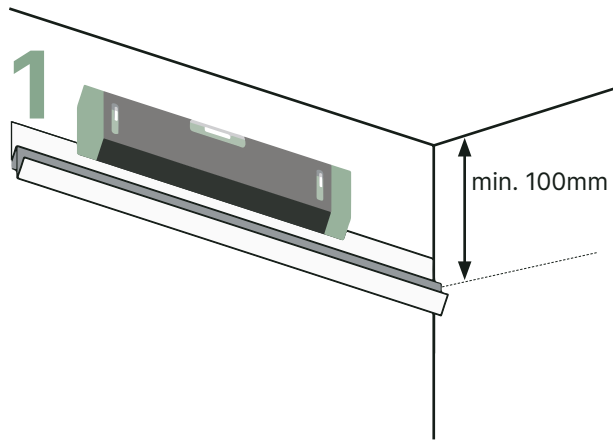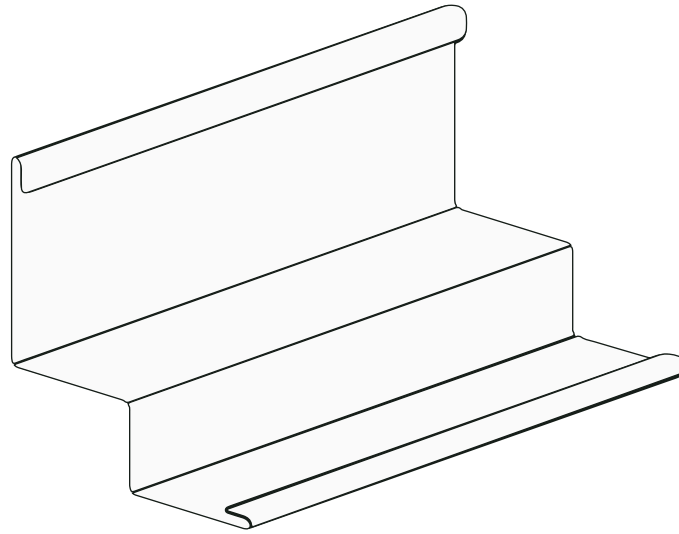



03.1 SHADOWLINE

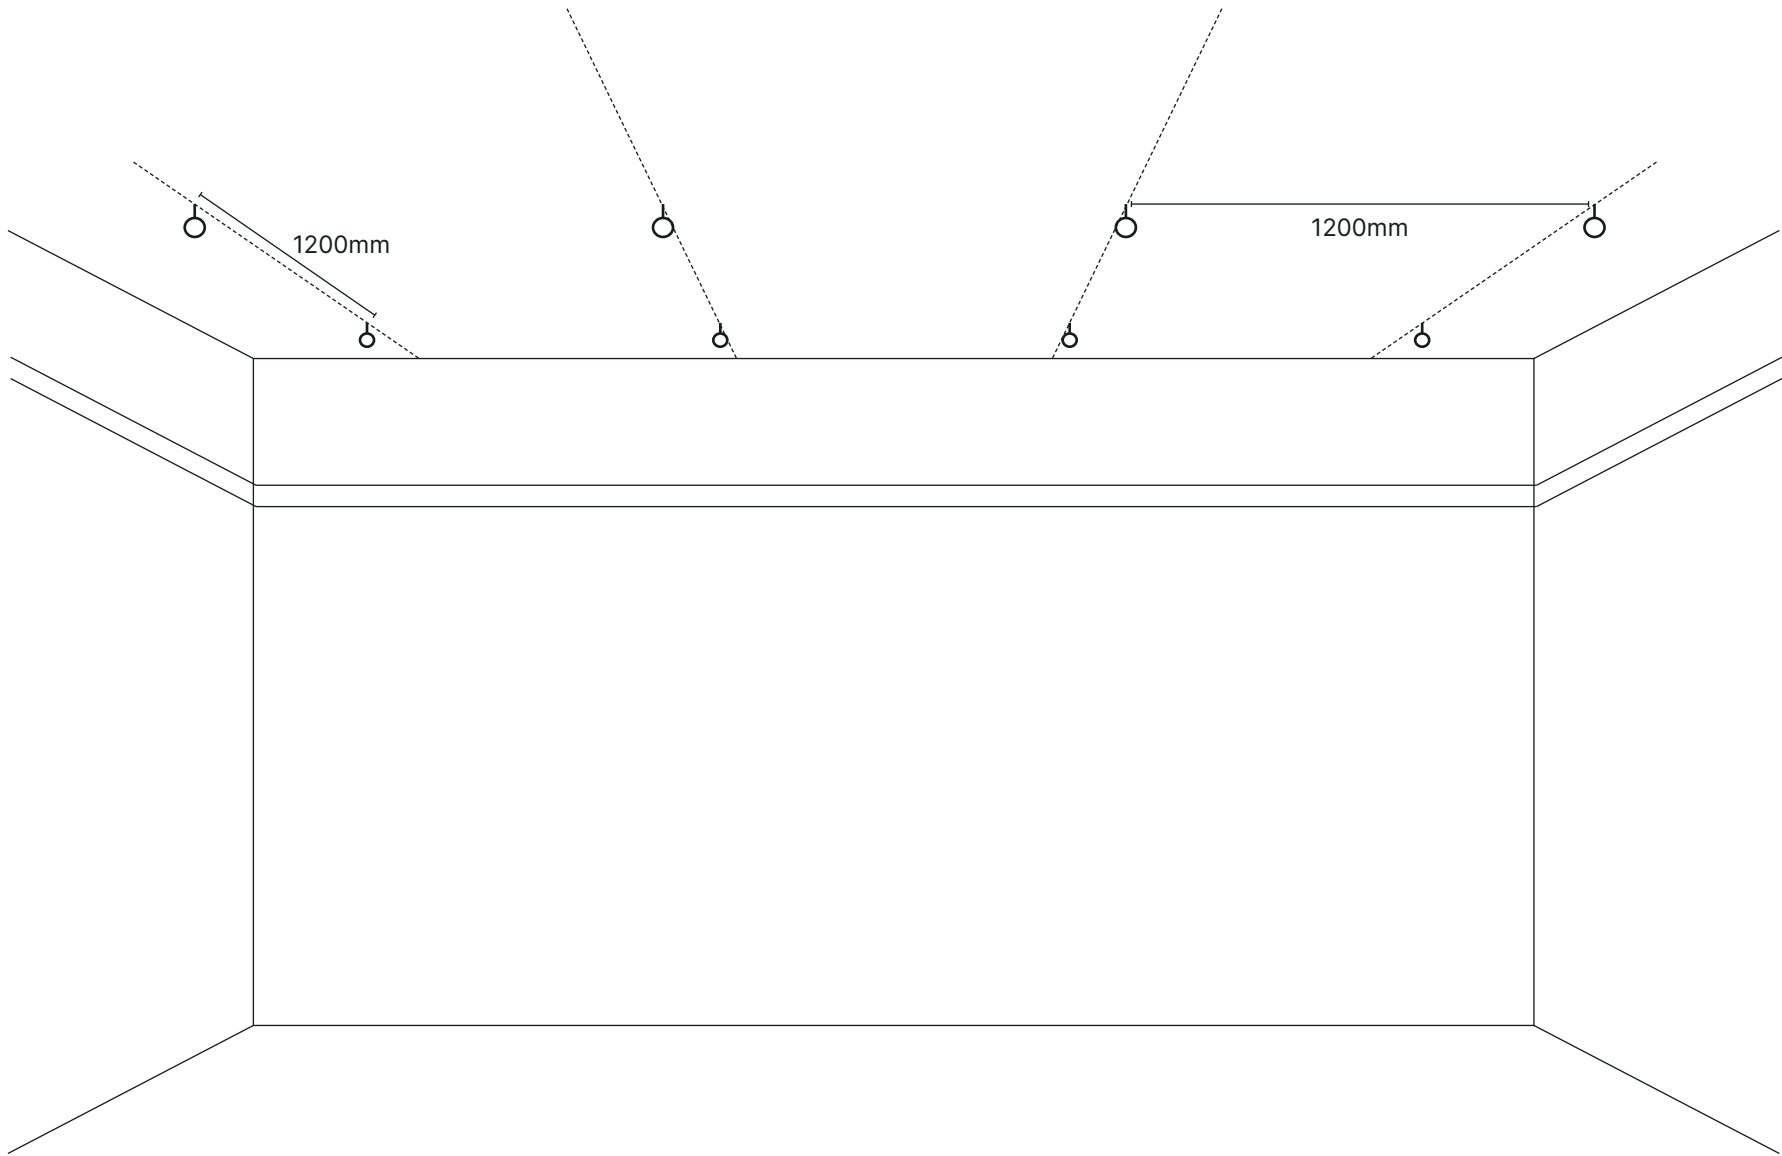


04 SUBSTRATE FIXINGS

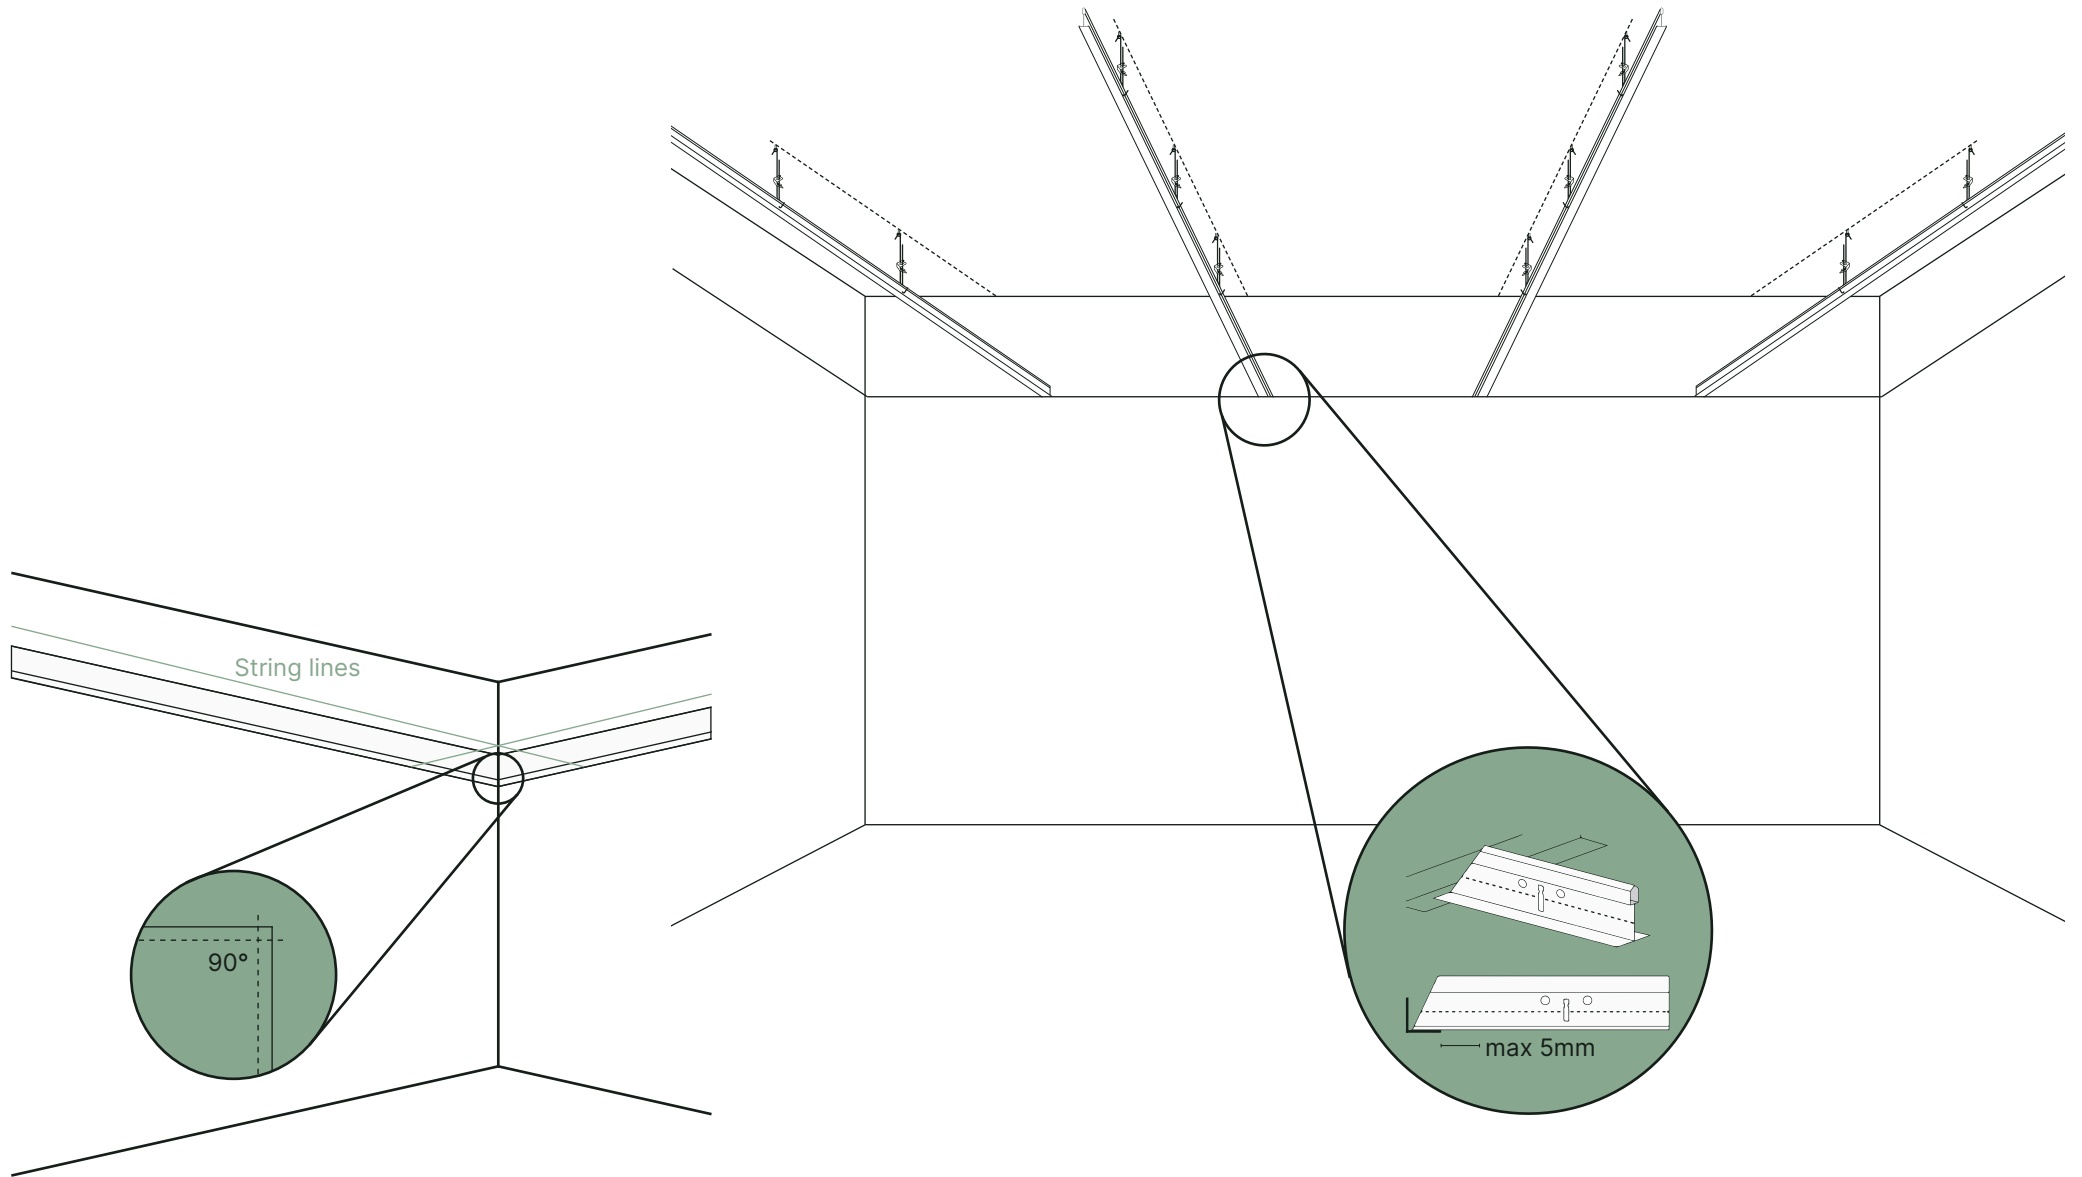


05 MAIN TEE INSTALLATION

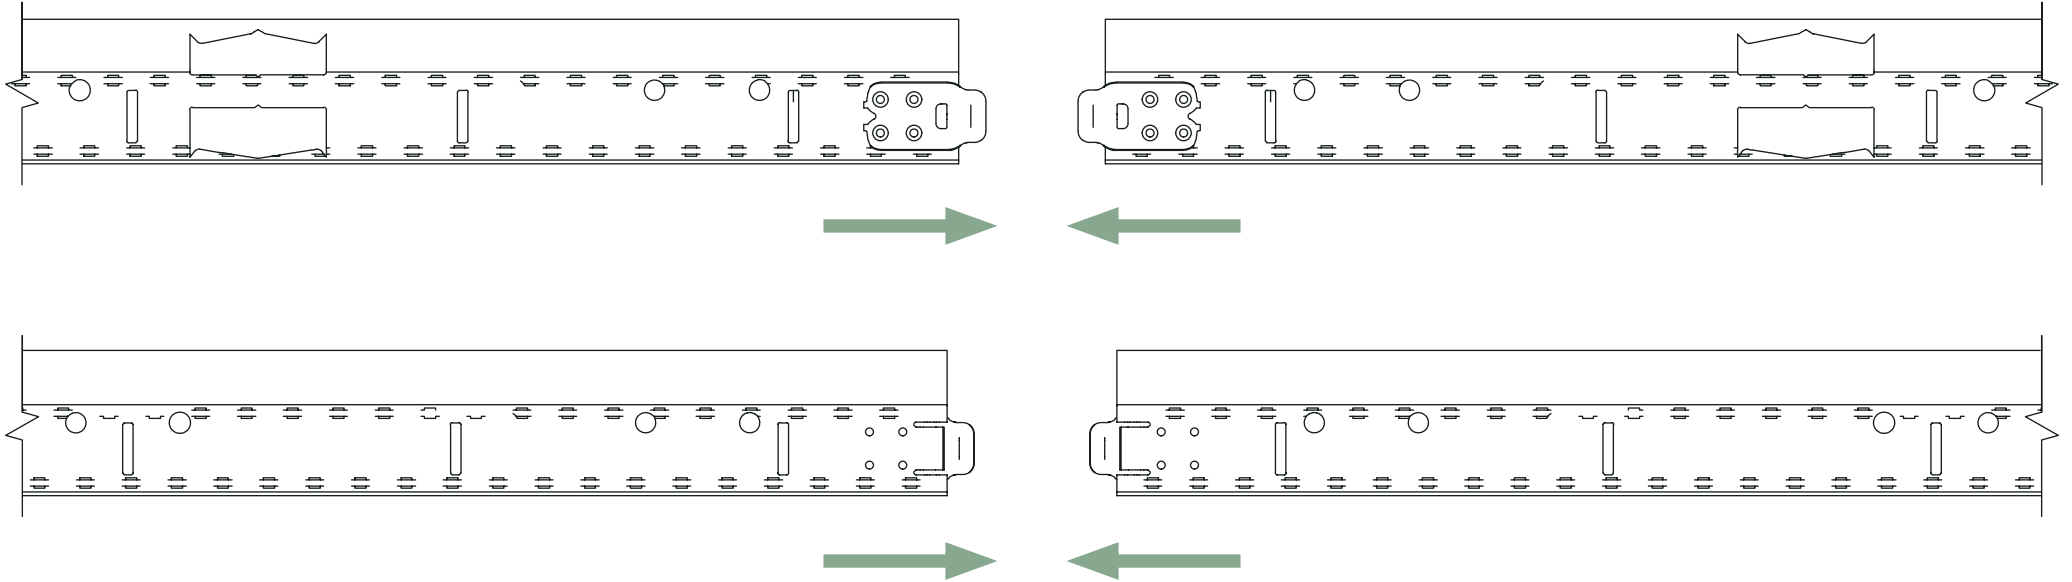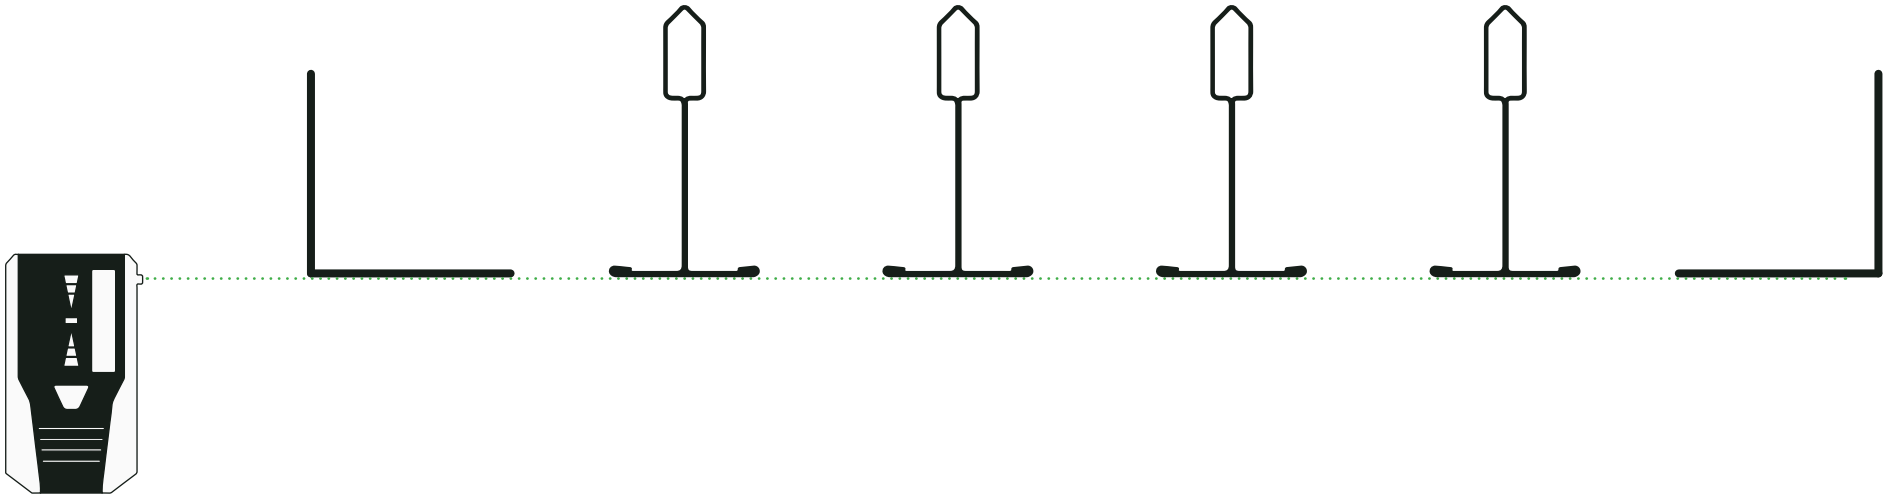









05.1 ALIGNMENT & JOINING

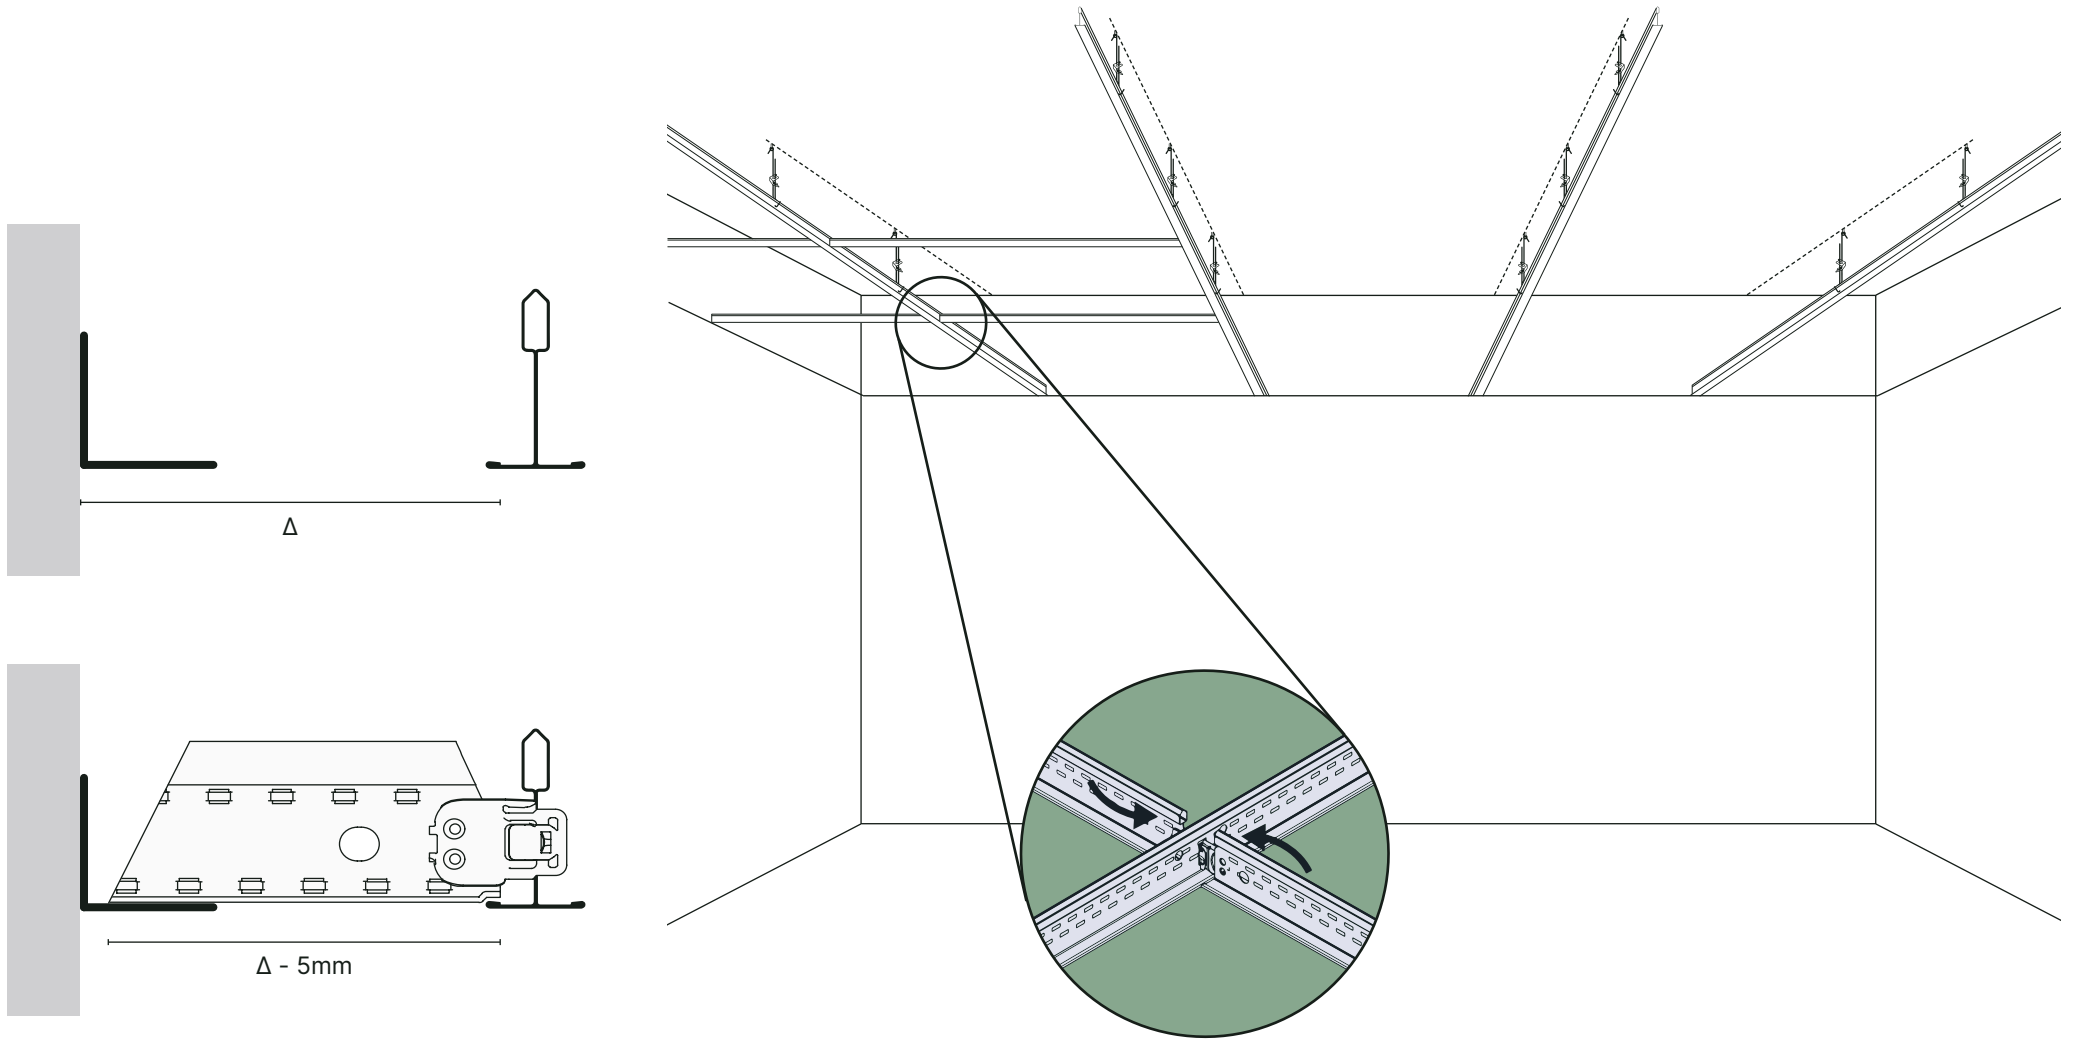




06 CROSS TEE INSTALLATION

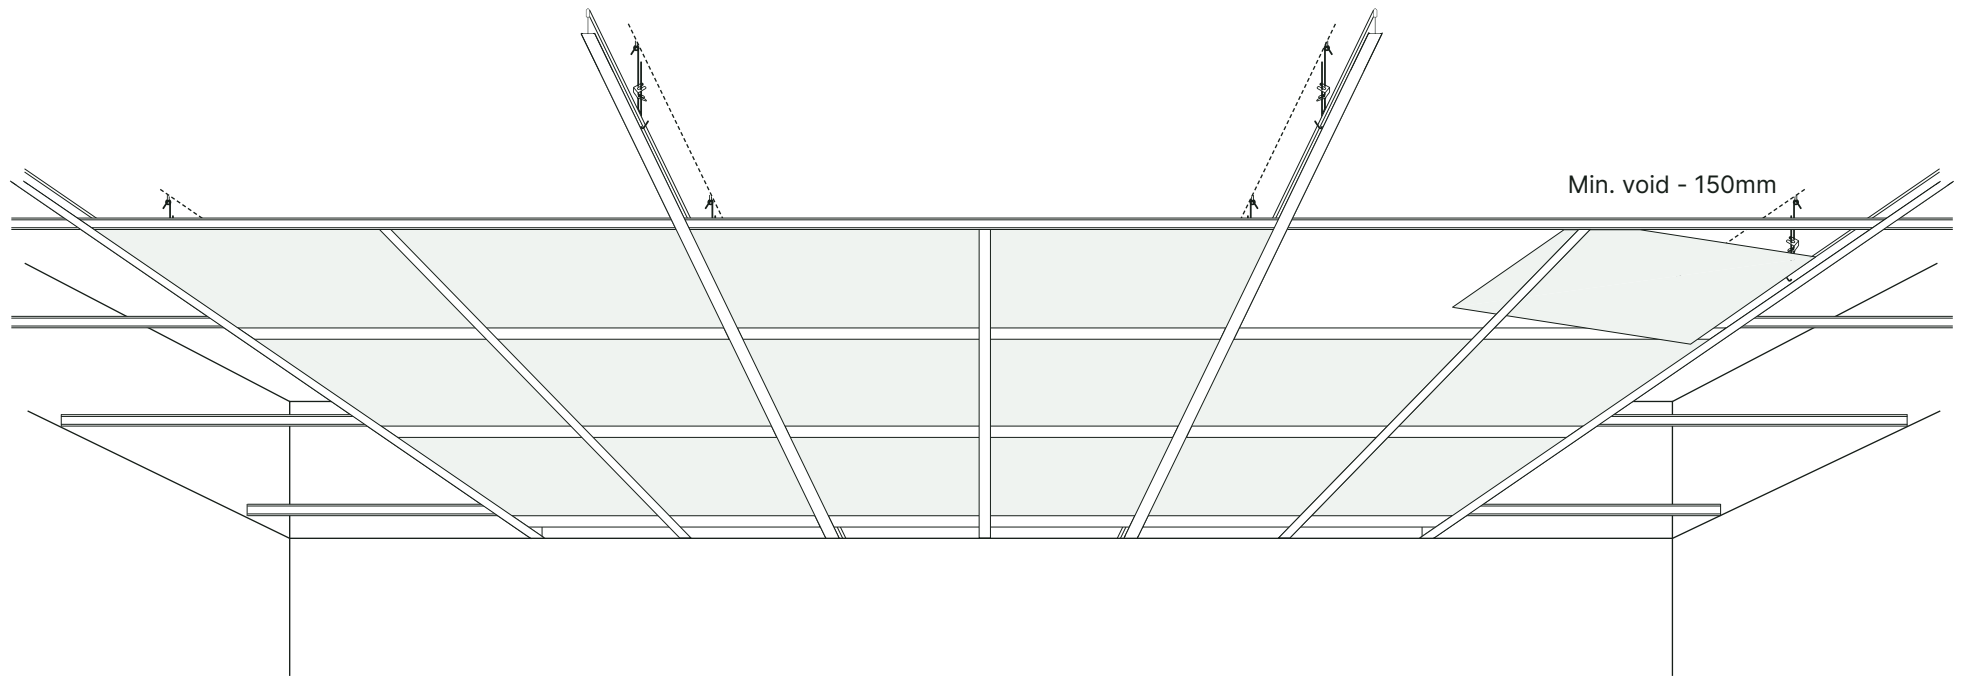

07 FULL TILE INSTALLATION

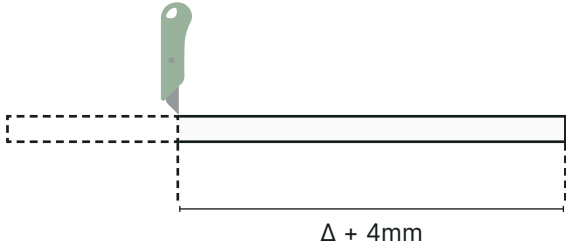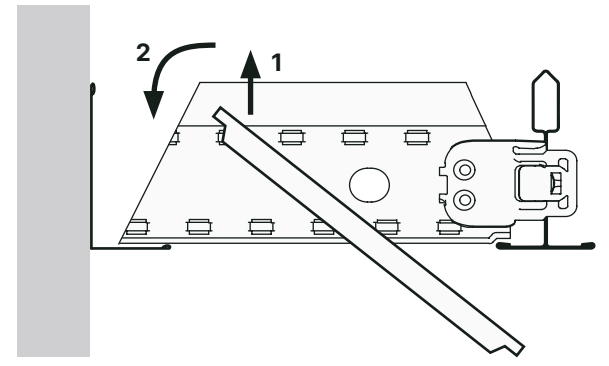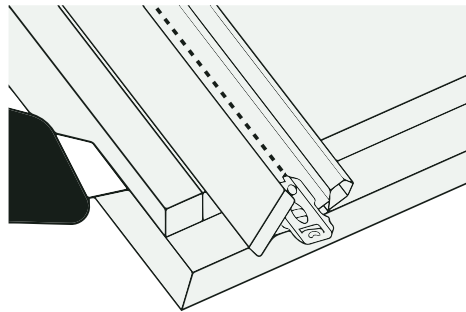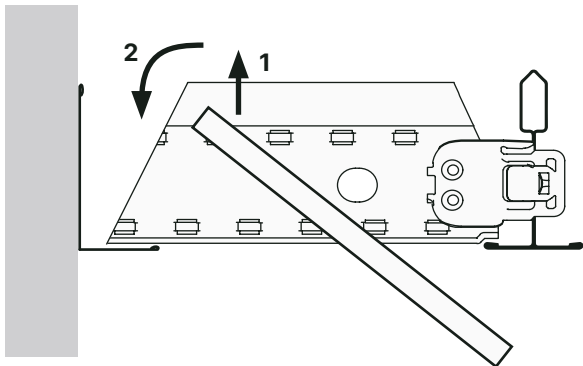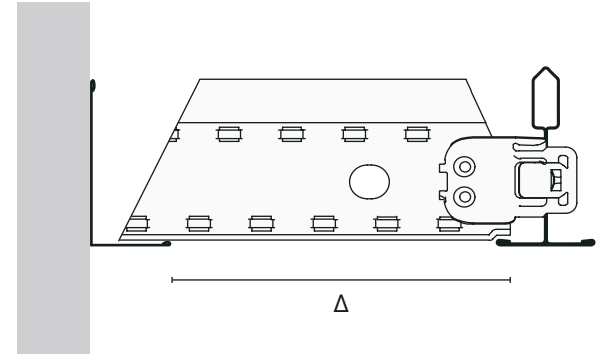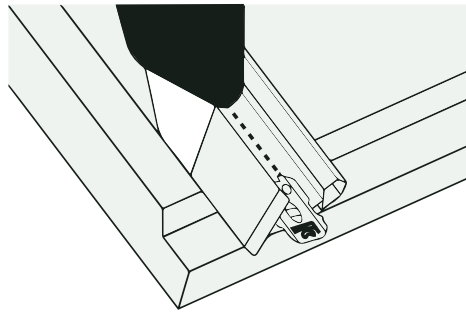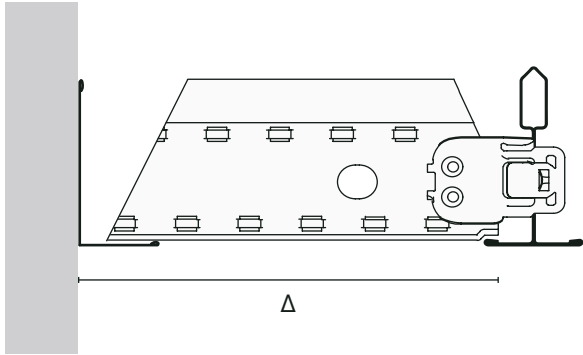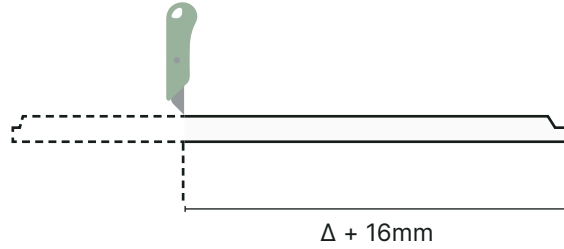A**B**

07.1 CUT TILE

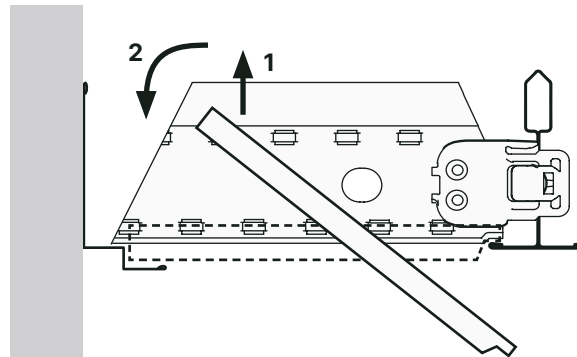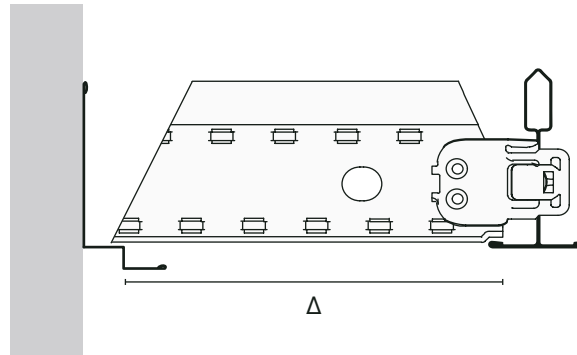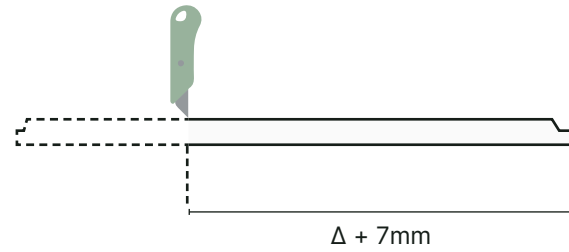

07.2 CUT TILE WITH S/LINE

WHERE TO BUY

ACT / NSW Aluform Interior Supplies
/ QLD Cnr Hincksman & Carrington St, Queanbeyan East NSW 2620
aluforminteriors.com.au

VIC / TAS Trumark
50 - 52 Koornang Rd, Scoresby VIC 3179
trumark.com.au

SA / WA ADX Depot
844 South Rd, Edwardstown SA 5039
adxdepot.com.au

NCS

50 - 52 Koornang Road, Scoresby VIC 3179
nationalcs.com.au
1300 627 001